

ZK1022

Batch 0000-PCT-00

12N Rear Audible Kit

COMPONENTS

ITEM	QTY	DESCRIPTION
A	1	Flashmaster Audible Relay
B	1	7 Pin Socket (12N)
C	1	Socket Gasket
D	1	Side Mounting Plate
E	1	1.6 Metres 7 Core Cable

BOLT PACK

ITEM	QTY	DESCRIPTION
F	3	Nuts, Screws and Washers
G	2	Earth Terminals
H	8	Scotchloks
I	1	Grommet

FITTING PROCEDURE

- ⇒ Disconnect Battery (Important – Always follow vehicle manufacturer's instructions for disconnecting battery).
- ⇒ Wire the 7 core cable to the socket as shown in diagram A below. Take the 7 core cable into the boot through the grommet supplied.
- ⇒ Locate the vehicle wiring harness and connect as shown in diagrams A and B below.
- ⇒ Re-connect the battery only after all wiring is completed, then test.
- ⇒ Plug trailer unit into socket and operate indicator switch, an audible buzz will sound on each operation of the car and trailer unit indicators. If the relay fails to sound this warns the driver that the trailer unit indicators are not working.

FAULT FINDING


- ⇒ Relay not sounding after fitting: Check all connections and correct wiring pairings.
- ⇒ Relay continually sounding: Check all connections and socket/trailer unit for earth fault.
- ⇒ Relay not sounding whilst indicators working: Check bulb wattage (21W) and earth connections.

SUITABLE FOR USE ON 12V NEGATIVE EARTH VEHICLES

FITTING DIAGRAM

Diagram A

INTERNATIONAL COLOUR CODE FOR 7 CORE CABLE (NORMAL)

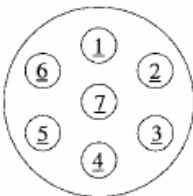

PIN No.	COLOUR	FUNCTION
1. (L)	YELLOW	L/H FLASHER
2. (54g)	BLUE	AUXILIARY
3. (31)	WHITE	EARTH
4. (R)	GREEN	R/H FLASHER
5. (58R)	BROWN	R/H TAIL LIGHT
6. (54)	RED	STOP LIGHTS
7. (58L)	BLACK	L/H TAIL LIGHT & No. PLATE

NOTES:-

1. Ensure that the earth is connected securely to bare metal free from paint and rust.
2. The auxiliary cable need only be connected when direct power is required in the caravan or trailer for lighting, etc. or a fog light. If not used, tape the end neatly for possible future use.

Diagram B

