

ZK1034

Batch 0000-PCT-00

12N-12S Rear Audible Kit (Pre Wired) + Combination Kit

COMPONENTS

ITEM	QTY	DESCRIPTION
A	1	Flashmaster Audible Relay
B	1	12n-12s Pre Wired Socket on T Plate
C	1	Combination Kit

BOLT PACK

ITEM	QTY	DESCRIPTION
D	3	Earth Terminals
E	13	Scotchlocks
F	2	Grommet
G	1	Fuse (16A)
H	1	Fuse Holder

FITTING PROCEDURE


- ⇒ Disconnect Battery (Important – Always follow vehicle manufacturer's instructions for disconnecting battery).
- ⇒ Wire 12n-12s cable through grommets provided.
- ⇒ Wire 12n cable to vehicle loom as shown in diagram (C) Also using the Flashmaster Relay.
- ⇒ Wire 12s cable to vehicle loom as shown in diagram (B).
- ⇒ Wire combination kit as fitting instruction supplied.
- ⇒ Re-connect the vehicle battery only after all connections have been completed.

SUITABLE FOR USE ON 12V NEGATIVE EARTH VEHICLES

FITTING DIAGRAM

DIAGRAM A

INTERNATIONAL COLOUR CODE FOR 7 CORE CABLE (NORMAL)

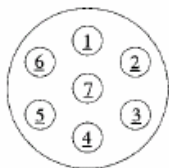


PIN No.	COLOUR	FUNCTION
1. (L)	YELLOW	L/H FLASHER
2. (54g)	BLUE	AUXILIARY
3. (31)	WHITE	EARTH
4. (R)	GREEN	R/H FLASHER
5. (58R)	BROWN	R/H TAIL LIGHT
6. (54)	RED	STOP LIGHTS
7. (58L)	BLACK	L/H TAIL LIGHT & No. PLATE

NOTES:-

1. Ensure that the earth is connected securely to bare metal free from paint and rust.
2. The auxiliary cable need only be connected when direct power is required in the caravan or trailer for lighting, etc. or a fog light. If not used, tape the end neatly for possible future use.

DIAGRAM B

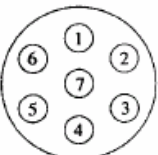

Pin No.	Colour	Function
1. (L)	Yellow	Reversing Lamp and/or Reversing catch or Inertia Brakes
2. (54g)	Blue	No Allocation
3. (31)	White	Earth.
4. (R)	Green	Power Supply
5. (58r)	Brown	Sensing Device (i.e Warning Light with Common-Return)
6. (54)	Red	Caravan Refrigerator
7. (58)	Black	Earth

DIAGRAM C

